

DIAPHRAGME RIGIDE

The image shows the SAP2000 v18.2.0 Ultimate 64-bit interface. The 'Assign' menu is open, and the 'Constraints...' option is selected. The 'Define Constraints' dialog box is open, showing 'Diaphragm' as the chosen constraint type. The 'Diaphragm Constraint' dialog box is also open, showing the 'Z Axis' selected for the constraint axis and the option 'Assign a different diaphragm constraint to each different selected Z level' checked. The 'Assign Joint Constraints' dialog box is open, showing 'None' as the selected joint.

1-Tous selectionner

2-Clic sur Constraints

3-Choisir Diaphragm

Clic

Valider

4-Choisir cette option et Valider